

القرب قارئ بطاقة التحكم في الوصول مع ويغان RFID 13.56MHZ في الهواء الطلق
26 و 34



EA-63 LOOK؟ ما الذي تعنيه



EA-63'S MAIN PARAMETER

RFID 頻率:	RFID 13.56MHZ 頻率 34 26 頻率
型號:	EA-63
電壓:	12V
電流:	100mA
IC:	IC (13.56 頻率)
接口:	WG26 / WG34 (接口)
距離:	5 ~ 15cm
防護等級:	IP66 (防護等級)
尺寸:	85 * 45 * 18 (mm)
重量:	6g
接口定義:	12 (VCC) + GND (GND) / D0 (D0) / D1 (D1) / LED (LED) / WG (WG)

□ □□□□□:	□□□□□□□□ □□□□□□ □□□□ □□□□□□ □□ □□□□□□ □□□□
□□□□:	□□□□□□ ABS + □□□□ □□□□ □□□□ + PCB □□□□
□□□□□□ □□□:	□□□□
□□□:	0.1KG
□□□□:	2 □□□□□□ □□□
OEM:	□□□□□□□□ □□□□□□□□ □□□□□ □□□□

EA-63 ما المميزات



1. Plastic waterproof door access control IC(13.56MHz) card reader

2. Working voltage DC 8~15V

3. Working current <100mA

4. Card type IC(13.56MHz) Mifare card

5. WG26/WG34 adjustable

6. Reading distance 5~15cm

7. Transmitting distance >80m(from reader to controller)

8. Waterproof **IP66**(suitable for outdoor use)

9. Wire port: DC+ / GND / D0 / D1 / LED / WG, 6 wires


10. Suitable for all kinds of IC door access control system

11. 2 years warranty , welcome OEM

EA-63'S STANDARD PACKAGING؟ كيف حول



مناسبة للتثبيت؟ أين هو EA-63

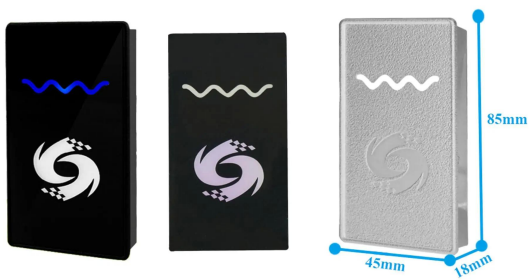

WHICH SYSTEM IS SUITABLE FOR?



Wiring diagram


How to adjust WG26/WG34 output?

WG34

Connect the purple and black wires of the card reader to the controller's GND connector.

WG26

Do not connect the card reader's purple wire.

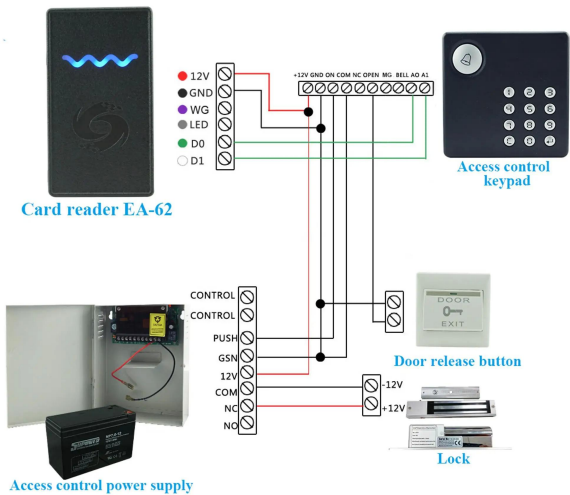

Application site



Apartment



Villa




Home



School



Hospital

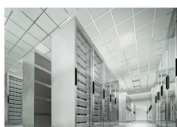

Document Room

كيف حول خيار آخر؟

SMQT[®]
铭汗科技



SMQT[®]
铭汗科技



SMQT[®]
铭汗科技



SMQT[®]
铭汗科技



SMQT[®]
铭汗科技



SMQT[®]
铭汗科技



SMQT[®]
铭汗科技



SMQT[®]
铭汗科技



SMQT[®]
铭汗科技

